

CAUTION! IMPORTANT INSTRUCTIONS

THE FOLLOWING RULES MUST BE ADHERED TO WHEN INSTALLING LIGHT FIXTURES. IF YOU HAVE ANY DOUBTS ABOUT HOW TO INSTALL A LIGHT FIXTURE OR IF IT FAILS TO WORK PROPERLY, CONTACT A LOCAL LICENSED ELECTRICIAN.

FAILURE TO COMPLY WITH THESE REQUIREMENTS COULD LEAD TO AN ELECTRICAL SHOCK OR FIRE, WHICH COULD BE INJURIOUS OR EVEN FATAL.


TAKE CERTAIN:

1. POWER AT THE MAIN FUSE BOX IS DISCONNECTED BEFORE INSTALLING THE FIXTURE.
2. THE FIXTURE GROUND WIRE (BARE OR GREEN INSULATED WIRE) IS NOT CONNECTED TO CURRENT CARRYING SUPPLY WIRES. (SOME FIXTURES MAY OR MAY NOT HAVE A GROUND WIRE)
3. NO BARE WIRES ARE EXPOSED OUTSIDE THE WIRE CONNECTORS WHEN JOINING CURRENT CARRYING WIRES.
4. THE INSULATION ON ANY OF THE WIRES HAS NOT BEEN DAMAGED DURING INSTALLATION.
5. NO ROUGH OR SHARP EDGES ARE IN CONTACT WITH ANY OF THE WIRES.
6. FIXTURE WIRES ARE CONNECTED TO THE PROPER HOUSE SUPPLY WIRES. IF YOU HAVE ANY DOUBTS ABOUT WHICH HOUSE SUPPLY WIRE IS WHITE AND WHICH IS BLACK, CONTACT A LICENSED ELECTRICIAN.
7. LIGHT BULBS WITH WATTAGES NO GREATER THAN THOSE SPECIFIED FOR THE FIXTURE ARE USED.
8. POWER IS OFF WHEN INSTALLING LIGHT BULB INTO THE FIXTURE.

REMEMBER THAT A FUSE OR CIRCUIT BREAKER PROTECTS WIRES FROM BECOMING OVERHEATED. OVERHEATED WIRES CREATE AN OVERLOAD, AND THE FUSE WILL BLOW OR CIRCUIT BREAKER WILL TRIP. BEFORE REPLACING THE FUSE OR RESETTING THE CIRCUIT BREAKER, LOCATE THE CAUSE OF THE OVERLOAD, USUALLY TO MANY APPLIANCES ON THE SAME LINE OR A SHORT CIRCUIT.

Assembly and Installation

1. Pull the supply wires out of the outlet box and thread the 1-1/2" screws into the crossbar.
2. Fasten the crossbar to the outlet box with the existing screws.
3. Connect the white supply wire to the white, ribbed or marked fixture wire with a wire nut (provided in some models only). NOTE: Ribbed wire is distinguishable by raised lines on the wire jacket.
4. Connect the black supply wire to the black, smooth or unmarked fixture wire in the same manner.
5. Connect the fixture ground wire and supply ground wire to the crossbar with the green screw and cup washer. NOTE: IF YOUR OUTLET BOX DOES NOT HAVE A SUPPLY GROUND WIRE, CONTACT A LOCAL LICENSED ELECTRICIAN FOR INFORMATION ABOUT CONFORMING TO NATIONAL AND LOCAL ELECTRICAL CODES.
6. Position all wires inside outlet box and push fixture body to ceiling so that 1-1/2" screws protrude through the key slots. Turn fixture to seat screws in the narrow ends of the slots and tighten screws.
7. Install the lamp, not provided and reconnect the electrical power.

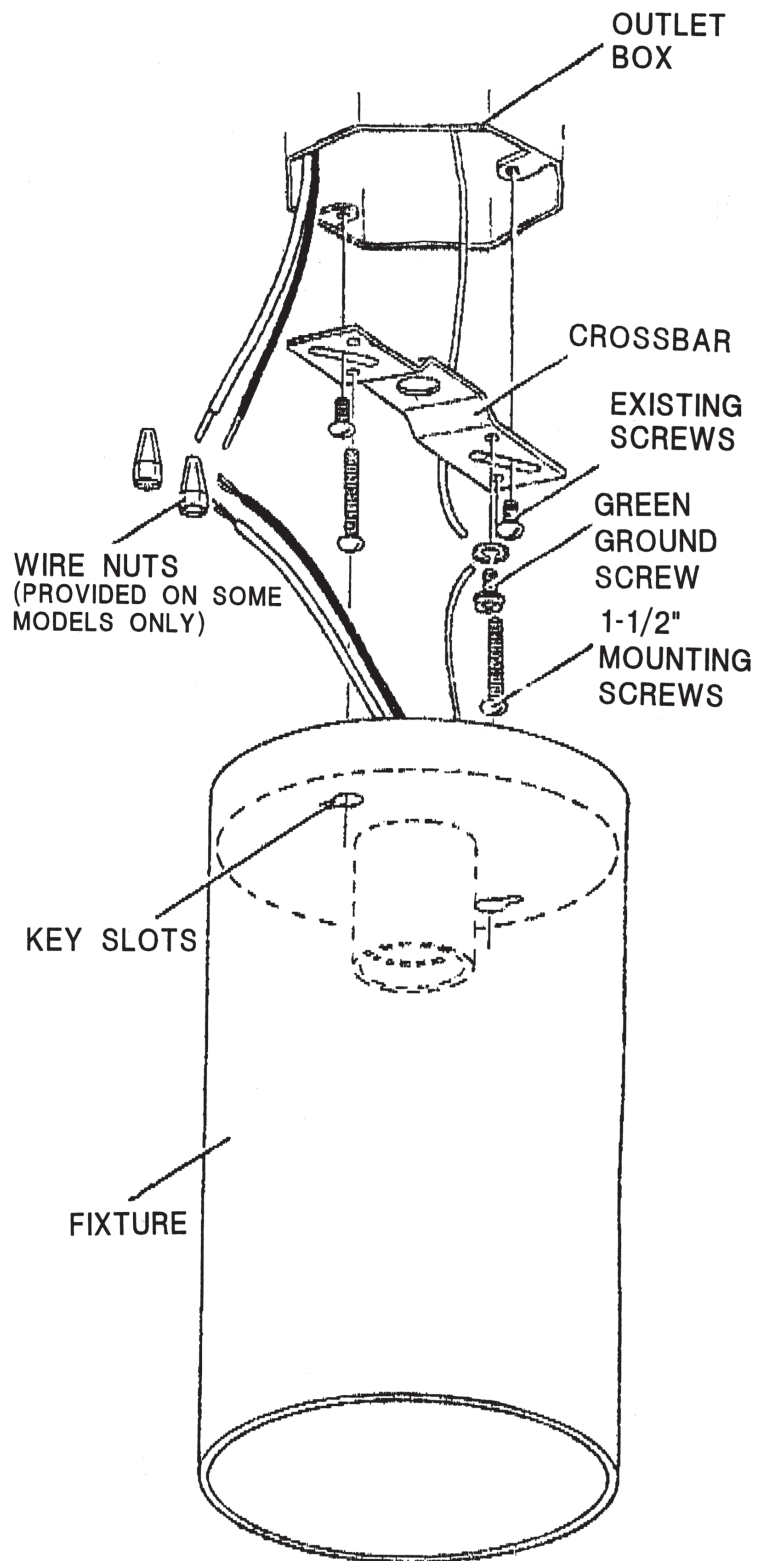

2/28/90

VO-131